 


 

 
 

 
 



 


How to set TV model







1. TV model set-up 1 (Enter TV brand codes)

- a. Press  and  for 3 seconds, then the LED of  turns bright.
- b. When LED of  turns bright. Enter TV brand codes with reference to the TV brand list.
(If there are many codes, repeat the entering TV brand codes until TV turns off.)
- c. If TV turns off, Press 
- d. LED of  blinks 3 times after successful implementation.


 
 

2. TV model set-up 2 (Auto search)

- a. Press  and  for 3 seconds, then the LED of  turns bright.
- b. When LED of  turning bright. Press  ,  keys until TV turns off.
- c. If TV turns off, Press 
- d. LED of  blinks 3 times after completed.

3. TV model set-up 3 (ID Recall)

- a. Press  and  for 3 seconds, then the LED of  turns bright.
- b. While LED of  turns on, press  , then the stored TV brand code stored on the remote control unit can be confirmed once the LED of  starts to blink.

Example)

- “ 0 “ – LED of  blink 10 times quickly.
- “ 1 “ – LED of  blink once slowly.
- “ 2 “ – LED of  blink 2 times slowly.
- “ 9 “ – LED of  blink 9 times slowly.

